Tera Term Setup



- Tera Term
 - Open-source terminal emulator
 - We will use this as our console (window) for text input/output

- Tera Term Download
 - Browse to <u>https://osdn.net/projects/ttssh2/releases/</u>
 - Scroll down and click the teraterm-4.106.exe file
 - The version number may be slightly different
 - The .exe file will be loaded into your downloads folder
 - Dbl-click on the xxx.exe file
 - Say yes to allow changes
 - Read and Accept the agreement
 - Leave the defaults and select next
 - Choose your language of choice and select next
 - Create shortcuts if you wish and select next
 - Select Install
 - Finish without launching

© ti

- Tera Term Startup
 - Tera Term requires a "target" to work
 - Do not start it without your Nucleo board plugged in
 - Do not plug your Nucleo board in until you completed the firmware update

- Tera Term Startup
 - With your Nucleo board plugged in USB
 - Start Tera Term
 - Either by using your shortcut

or

- Going to C:\Program Files (x86)\teraterm and launching ttermpro.exe
- Select Serial, and OK

| | Tera Term: New conr | nection | | × |
|---|---------------------|---------------------------|--------------------------------|---|
| | | Host: myhost.example.com | | 7 |
| | | History Service: O Telnet | TCP port#: 22 | |
| | | ⊚ SSH | SSH version: SSH2 🕓 | / |
| | | ○ Other | IP version: AUTO | / |
| (| Sejial | Port: COM5: STI | Microelectronics STLink Virl 🗸 | / |
| | | OK Cancel | Help | |



- Tera Term Startup
 - Setup → Terminal
 - Change Transmit to CR+LF
 - Check the Local echo box and OK
 - Shows whatever we type in the window
 - Setup → Save setup
 - Use the defaults and save
 - Now Tera Term will startup in this configuration





Tera Term Startup

