

Windows Driver Update

Last updated 8/12/22

EE2905 – Windows Driver Update

- Why Update
 - ST requires special Windows drivers to communicate with the Nucleo boards

EE2905 – Windows Driver Update

- Update Drivers
 - Step 1
 - **DO NOT** plug your processor board into your laptop
 - Step 2 – updated driver code
 - **Download** the driver “zip” file from the Lab 1 section of the website – use the downloads directory for the destination
 - **Rt-click** on the zip file and **select “extract all”** – use the downloads directory for the destination
 - Step 3 – firmware update
 - **Traverse** into the extracted directory - [en.stsw-link009](#)
 - **Rt-click** on the [stlink_winusb_install.bat](#) file and **select “run as Administrator”**

EE2905 – Windows Driver Update

- Update Drivers

