Version 18.1

Last updated 8/29/23


- Quartus Prime
 - Set of tools developed by Altera/Intel to support development of Altera/Intel FPGAs
 - Lite version
 - Reduced functionality
 - FREE!
 - 18.1
 - Last Windows version that has support for NIOS integrated
 - Newer versions fall back to Linux messy
- 7-ZIP
 - Archive read/write software needed to load the Quartus files

WARNING - WARNING - WARNING

Since our suppliers update their software on a regular basis – some of the screen captures and revision numbers may be different when you install the software


WARNING - WARNING - WARNING

- 7-zip
 - Software to read/write archive files
 - Go to: https://www.7-zip.org/
 - Select the 64 bit, x64 version download

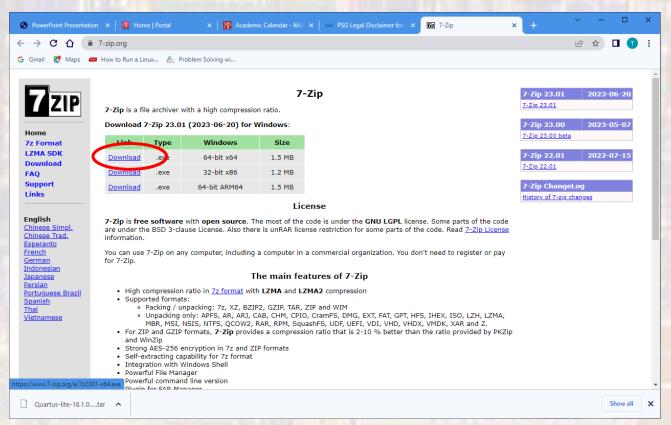

© ti


- 7-zip
 - Double click the extracted executable file
 - Downloads 7z2301-x64.exe
 - Accept modifications
 - Keep the default location and select install

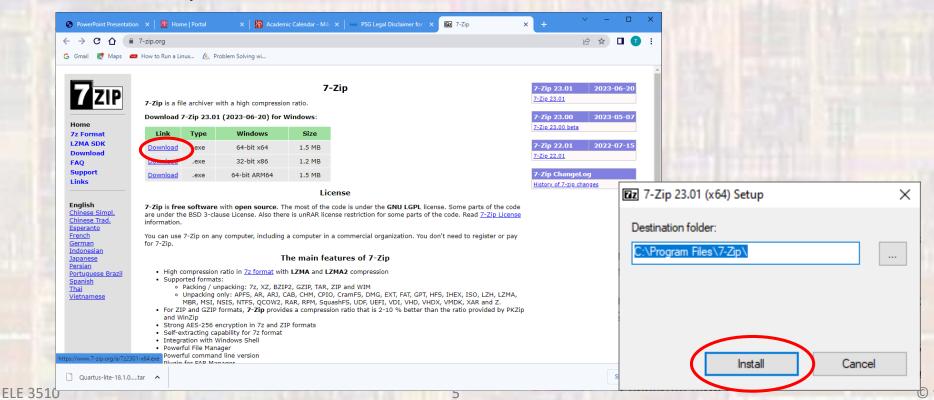


- Quartus Prime Setup
 - The following slides walk through the process of setting up the Quartus Prime software
 - Please note this process takes quite a while (>2 hours) depending on your internet connection.

- Quartus Prime Setup
 - Browse to the Intel Software Support site
 - https://www.intel.com/content/www/us/en/software-kit/665990/intel-quartus-prime-lite-edition-design-software-version-18-1-for-windows.html?


- Quartus Prime Setup
 - Select version 18.1 from the dropdown menu

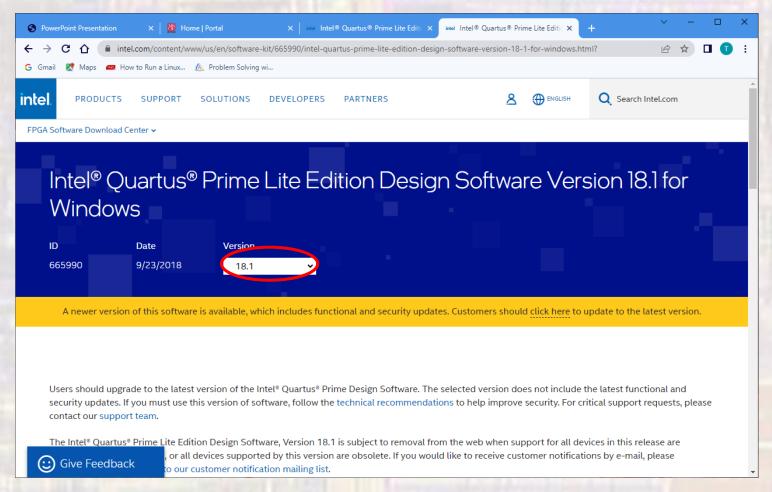


- Quartus Prime Setup
 - Scroll down
 - Select the Multiple Download tab
 - Select the Download button

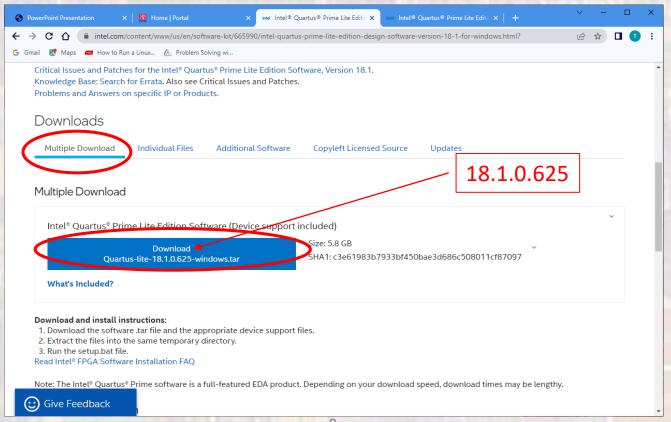


- Quartus Prime Setup
 - Accept the license if asked

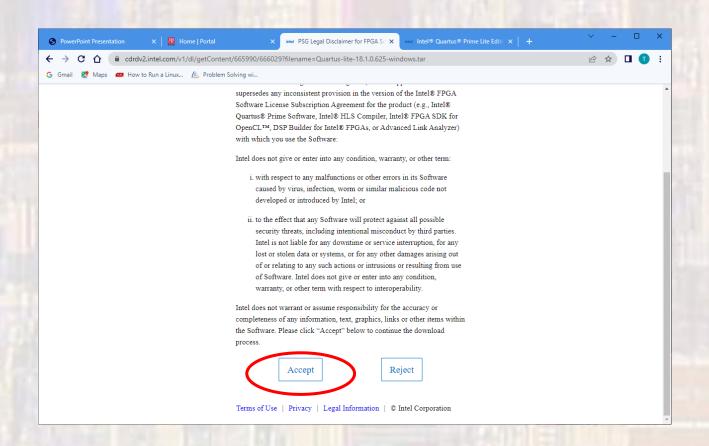

- Quartus Prime Setup
 - The download can take some time
 - Go to your Downloads folder
 - Rt-Click on the Quartus-lite-18.1.0.625-windows.zip file
 - Expand the 7-Zip line item and select Extract files
 - Leave all the defaults and select OK

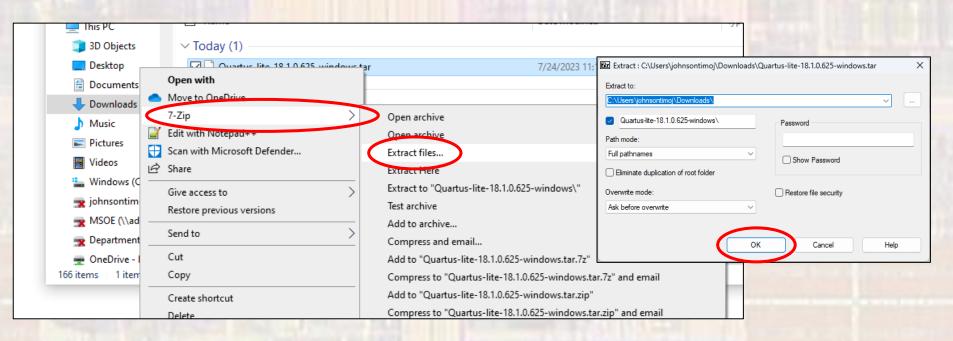



- Quartus Prime Setup
 - Traverse into the newly created Quartus-lite-18.1.0.625windows folder
 - Dbl-click the setup.bat file

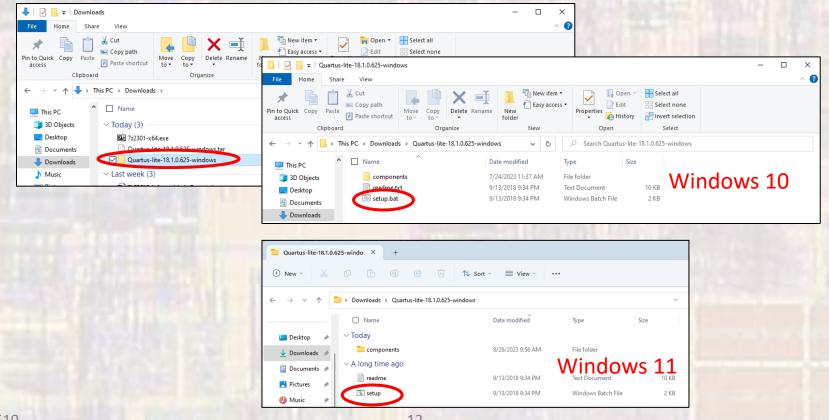

- Quartus Prime Setup
 - A Windows terminal window will oper
 - Allow changes
 - The Quartus setup wizard will open
 - Select Next
 - Accept the Agreement
 - Leave the default location and select next




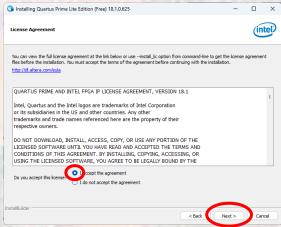

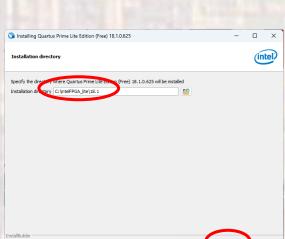


Check the status bar for a pending request to allow changes


- Quartus Prime Setup
 - Setup Wizard
 - The default selections should be correct
 - You can remove some of the devices if you wish

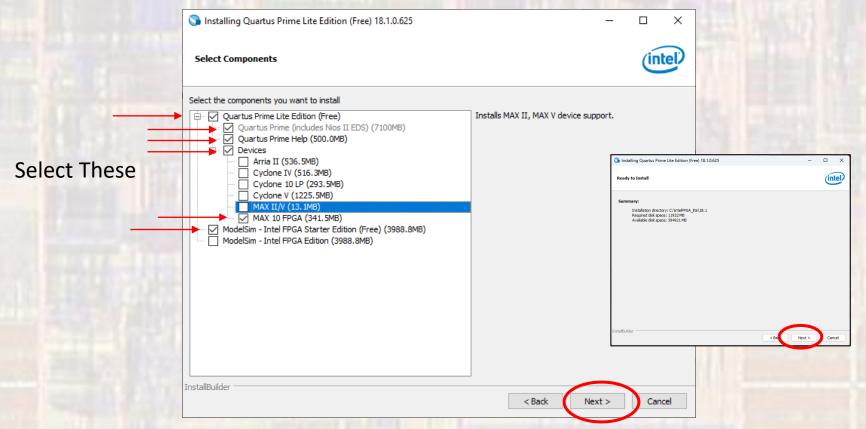


- Quartus Prime Setup
 - Setup Wizard
 - This may take a while so be patient

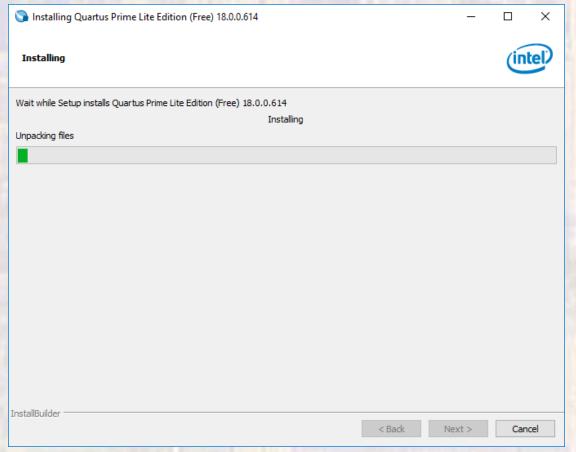


- Quartus Prime Setup
 - Setup Wizard
 - Launch the USB Blaster II driver installation
 - Create a desktop shortcut if you wish
 - Check the "Provide Feedback" box if you wish

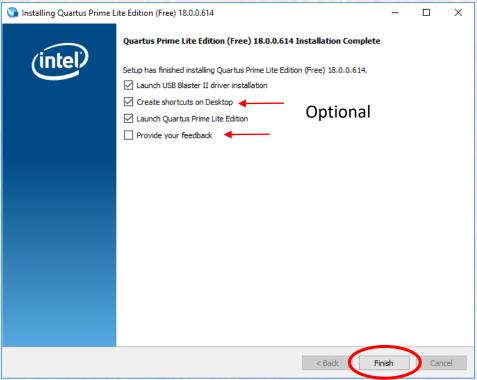


- Quartus Prime Setup
 - Device Driver
 - Next" box if you wish

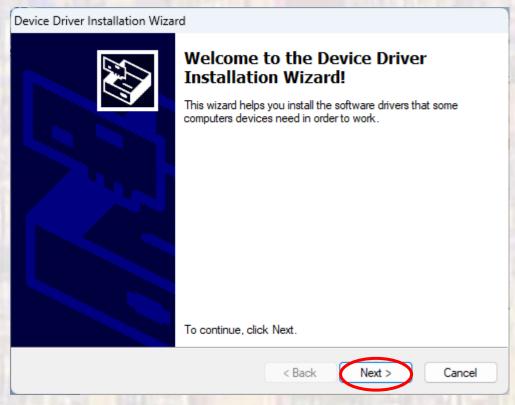


- Quartus Prime Setup
 - Device Driver
 - You may get additional instructions here just follow them

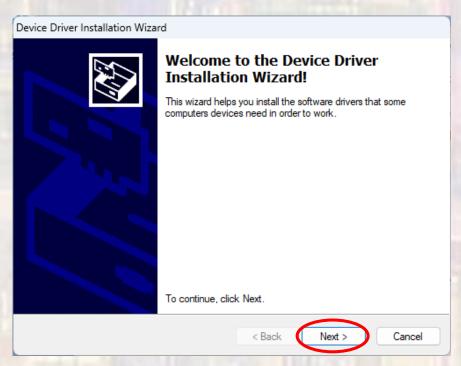


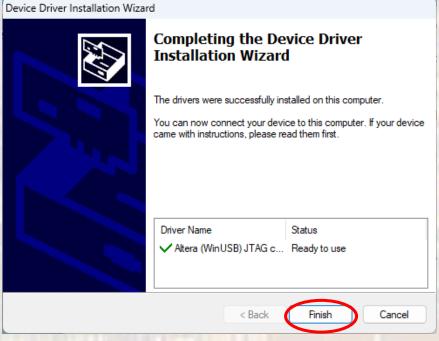

- Quartus Prime Startup
 - If you checked start Quartus you should see:

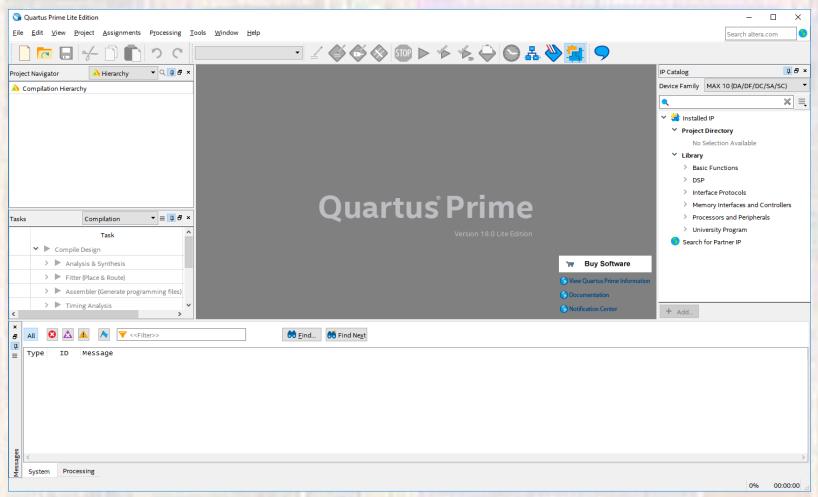

- Quartus Prime Startup
 - If you did not check Start Quartus
 - Start Quartus
 - Use your desktop app or
 - Traverse to <u>install_dir</u>/intelFPGA_lite/18.1/quartus/bin64 (assuming your machine is 64 bit)
 - Select the quartus application file

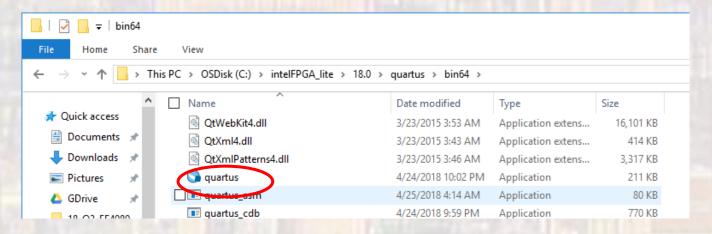

Quartus Prime – Startup

Congratulations !!!!