

## **SSEG Display**

- There are two standard 7-segment display variations
  - The DE10 uses the Common Anode variation
    - Pulling a pin LOW causes the LED to turn on

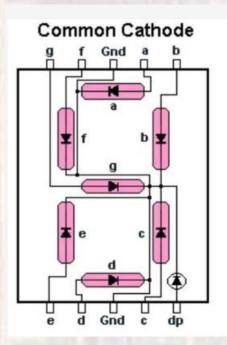

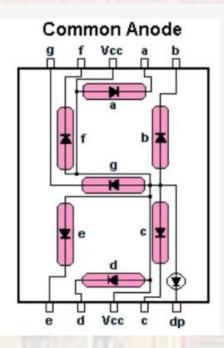


Typically wired as


dp g f e d c b a

e.g.
F → a + e + f + g
0 1 1 1 0 0 0 1
but – active low (DE10)
1 0 0 0 1 1 1 0

## SSEG Display

SSEG Characters

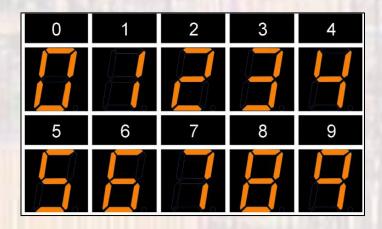

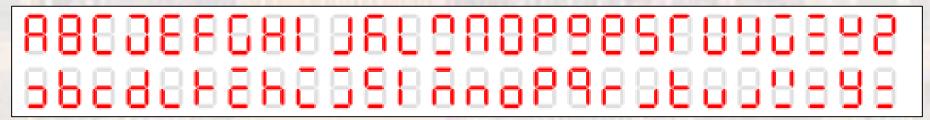

Mix cases to make the display more readable

