
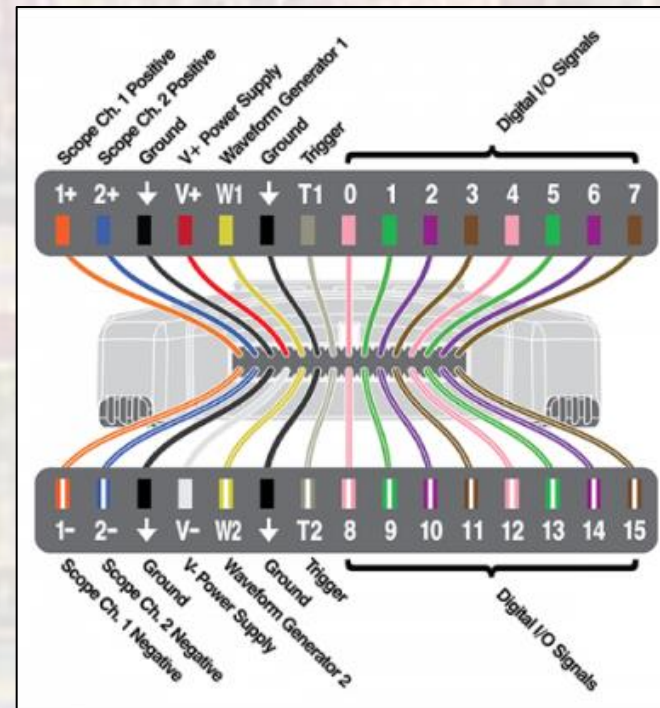


AD2 Startup

Last updated 10/7/25


Analog Discovery 2 - Startup

- Hardware Overview
 - USB power source
 - 30 pins (color coded wires)
 - Make sure your circuit always has a ground connection
 - Only need to connect 1 of the ground wires

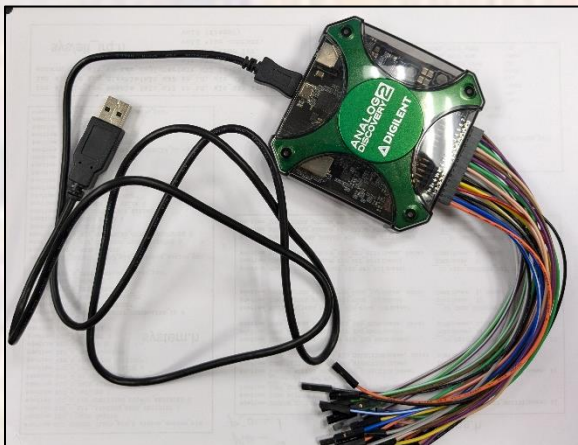


Analog Discovery 2 - Startup

- Software Overview
 - The Waveforms software will not start without the AD2 plugged in

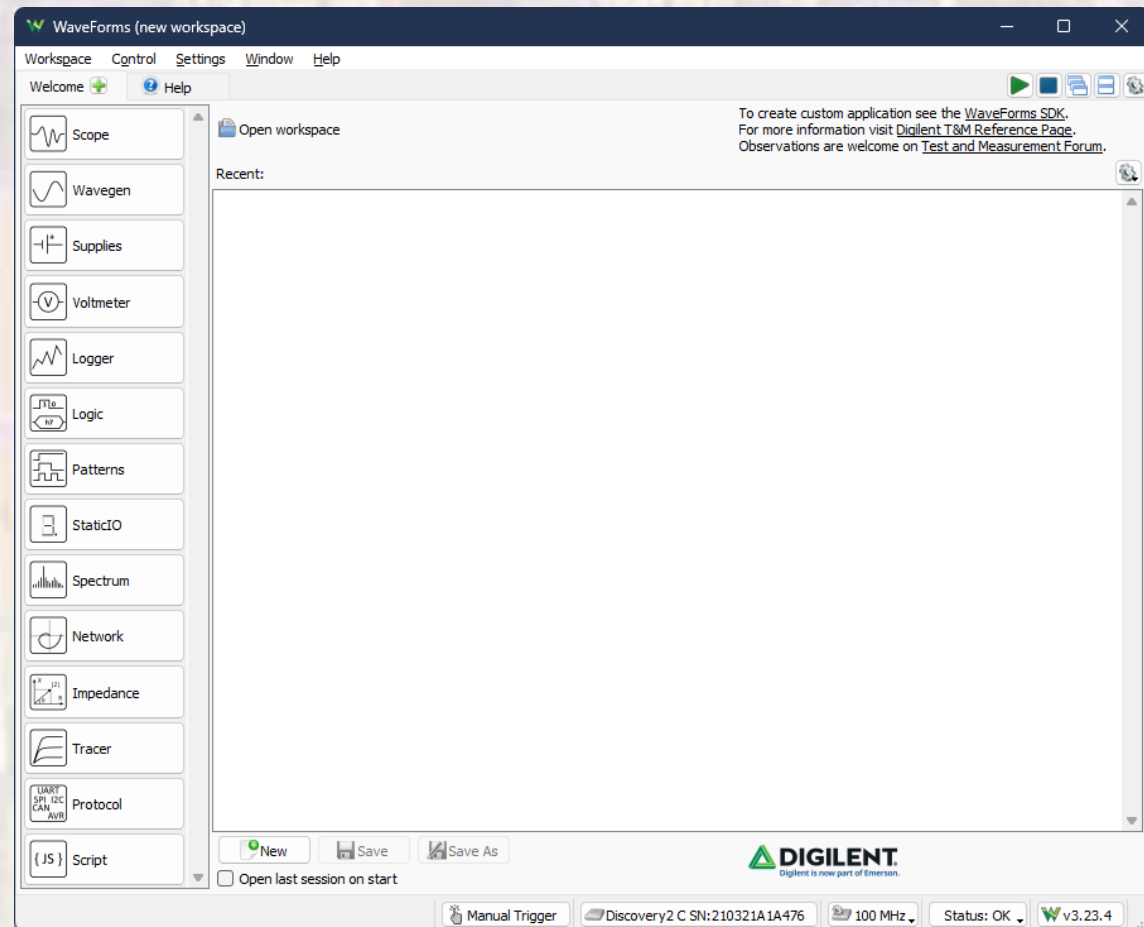

Analog Discovery 2 - Startup

- Add a tool
- Select the **Welcome +**

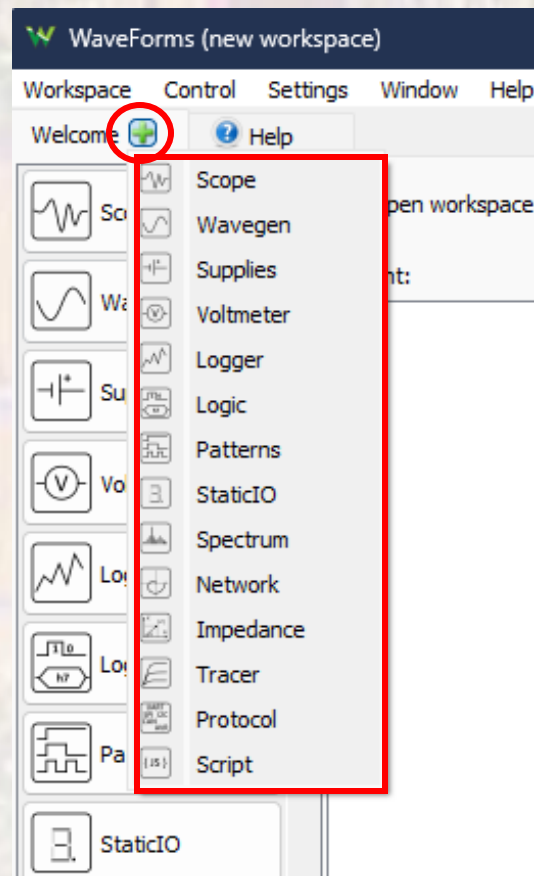

Analog Discovery 2 - Startup

- Saving your settings
 - Workspace → Save as
 - Select an appropriate location
- Restoring your settings
 - Workspace → Open
 - You will need to restart your patterns using Run